


THE STANBRIDGE CS2-ST WASHER/DISINFECTOR OPERATION MANUAL

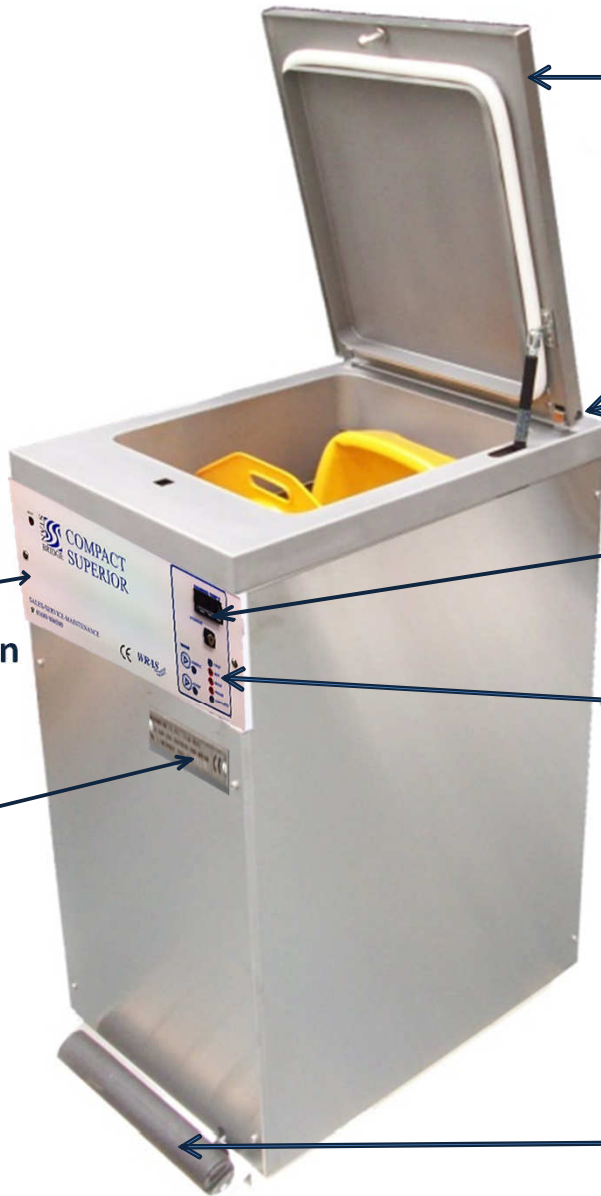

Control Panel
Hands free Display for visible disinfection



Lid

Override Keys. To be kept in safe place

Digital Temperature Display

Control Panel

Foot Pedal

Generator Reset Button

Serial Number Badge

WARNING

Do not attempt to use this machine until it has been correctly installed in accordance with our installation manual.

Please read Instruction details before attempting to run the machine.

An A3 laminated loading chart is included with machine – Please fix this to the wall close to the machine and visible to bedpan washer operatives.

Only use cleaning agents and equipment designed for cleaning Stainless Steel to clean the exterior of this machine.

Please Photocopy page 7 of this manual and keep for weekly maintenance checks.

GUARANTEE

- All Stanbridge products are thoroughly checked before leaving our Works.
- Each machine is subjected to actual operational tests, during which a large number of complete cycles are undertaken whilst the machine is 'in situ' in our own in-house sluice room.
- Should any component fail due to faulty manufacture or workmanship within twelve months of the despatch date from our factory, the faulty component must be returned to us for inspection, and a replacement will be sent to you Free of Charge to the original delivery address.

TO OPEN MACHINE

- To open the machine press foot in centre of bar as pictured.
- Please ensure your foot is placed in the centre of the pedal and fully over the pedal bar.





Here are some examples of incorrect foot pedal operation.




CS2 Bedpan Washer Operating Instructions

DO NOT SCRUB POTS AND BEDPANS BEFORE PLACING IN BEDPAN WASHER
WHEN USING SAFETY GEL  **PRE EMPTY PAN OR BOTTLE IN SLUICE SINK & RINSE**

- Press foot pedal in Centre of bar to open
- Place bedpan and contents directly into bedpan washer as shown
- Ensure bedpan is secured in machine cage and is facing jet
- Close lid – Do Not Slam
- Select Wash Programme - **Lightly** soiled pans & bottles press  **NORMAL**
OR **Heavily** soiled pans press  **SUPER**
- Remove gloves/apron and place in appropriate waste bin
- Decontaminate hands thoroughly using designated hand wash basin

ONLY HUMAN WASTE AND TOILET TISSUE IN PAN
Do NOT Place ANY other items in the machine.

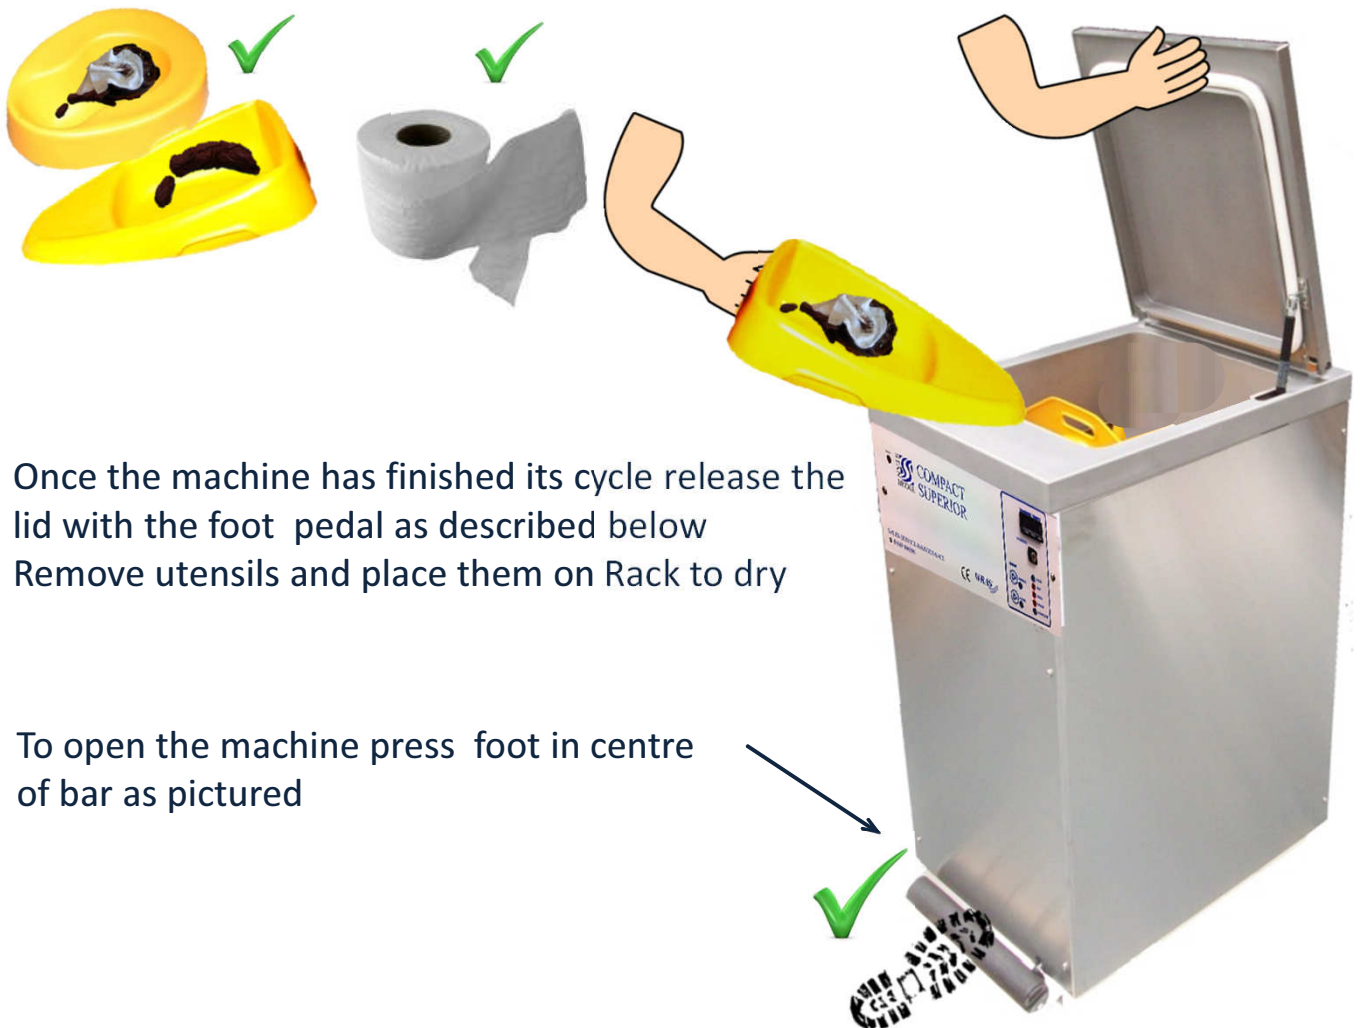

- Once the machine has finished its cycle release the lid with the foot pedal as described below
- Remove utensils and place them on Rack to dry
- To open the machine press foot in centre of bar as pictured

CS2 ST

Washer Disinfector Loading Capacity

The washer/disinfector in this manual is intended to wash and disinfect the utensils shown on the Data Sheet – See below for correct loading applicable to the machine you have purchased.



Stanbridge Slipper Pans
Capacity = 2 unit



Stanbridge Commode Insert
Pans Capacity = 2 unit



Stanbridge Bed Pans
Capacity = 2 unit



Commode Pot and Lid
Capacity = 2 sets

WHEN USING SAFETY GEL PLEASE PRE EMPTY PAN OR BOTTLE IN SLUICE SINK AND RINSE ENSURING ALL GEL IS REMOVED




Only Stanbridge approved utensils should be used in the machine, incorrect utensils could result in inadequate cleaning disinfection. The machine could also become damaged due to incorrect loading which could affect your warranty.



Urine Bottle
Capacity = 1 unit



Days Grey Commode Pot
Capacity = 1 unit

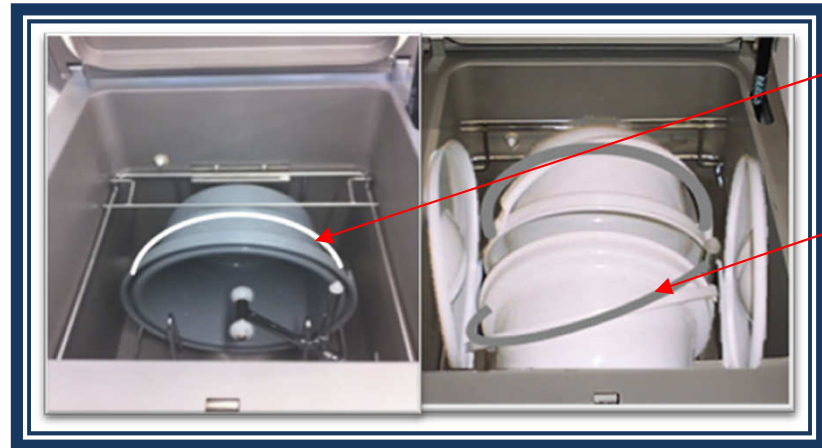

PLEASE CHECK THAT COMMODORE POT HANDLE IS SECURELY POSITIONED ABOVE THE POT AS SHOWN

Do NOT Place ANY other items in the machine.



No Wet Wipes



No Cotton Buds or Swabs



No Plastic Bags



No Paper Towels



No Syringes



No Nappies or Pads



No Gloves or Aprons

OPERATION and CYCLE DETAILS

This machine has been designed to include the following features:-

1. Normal Wash
2. Super Wash
3. Disinfection - 80°C for 70 seconds (machine reaches 85°C)
4. Integral programmer with fault finding


Normal Wash - Lightly soiled items

1. Press normal wash button
Machine will go through the following cycle:-
 - a) Pulsed Cold Wash - 5 seconds on 5 seconds off (8 times) or 40 seconds single cold.
 - b) Hold. Machine stops until 80°C has been achieved inside the canister.
 - c) Once 80-85°C has been achieved - disinfection takes place for 70 seconds.
 - d) Cold Rinse - 5 seconds or 10 seconds single cold or hot wash.
 - e) Cycle complete. Door can now be opened.

Super Wash - Heavily soiled items

1. Press Super Wash button
Machine will go through the following cycle:-
 - a) Cold water flush wash
 - b) Pulsed Cold Wash - 5 seconds on 5 seconds off (8 times) or 40 seconds single cold.
 - c) Hold. Machine stops until 80°C has been achieved inside the canister.
 - d) Once 80-85°C has been achieved - disinfection takes place for 70 seconds.
 - e) Cold Rinse - 5 seconds or 10 seconds single cold or hot wash.
 - f) Cycle complete. Door can now be opened.


Machine Operation - Status Indicators

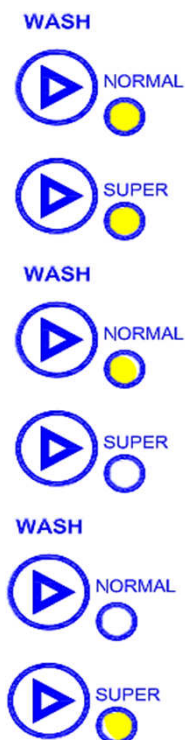

Machine ready for use.

Normal wash Selected and cycle is running.

Super wash selected and cycle running.

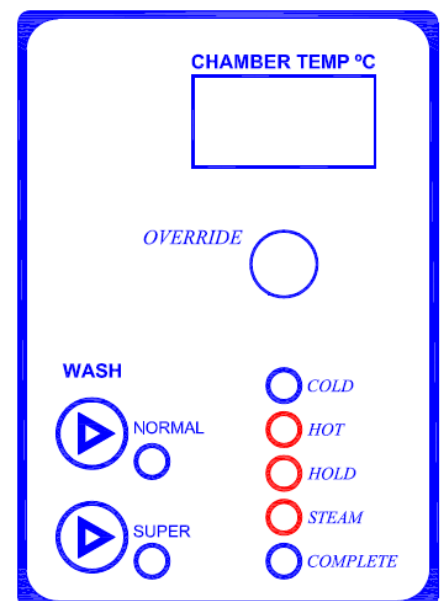

SPECIFICATION

Utensil Load Capacity

CS1

CS2

| | | |
|----------------------------------|-----------------|-----------------|
| Slipper Pan | 1 | 2 |
| In Bed Pan | 1 | 2 |
| Commode Pot & Lid | 1 | 2 |
| Square Basin* | 1 | 1 |
| Commode Insert Pan | 1 | 2 |
| Support Carrier* | 1 | 2 |
| White Commode Pot & Lid | 1 | 2 |
| Grey Commode Pot | 1 | 1 |
| Urine Bottle | 1 | 1 |
| Cycle Times (estimated) | 6-12mins | 6-12mins |
| Washing Cycles | 2 | 2 |
| Water Supply | Cold | Cold |
| Electrical Supply (single phase) | 230V/50Hz/16a | 230V/50Hz/16a |
| Stainless Steel Panels | YES | YES |
| Dimensions H x W x D (mm) | 910 x 435 x 600 | 910 x 435 x 600 |
| Nett Weight (kg) | 77 | 77 |

Subject to change without notification

Cycle times are estimated and vary

* May require special cage

Machine Maintenance Checklist

Machine No _____

| <u>Weekly Maintenance Checklist</u> | Sign Date | Sign Date | Sign Date | Sign Date | Sign Date | Sign Date | Sign Date | Sign Date |
|---|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|
| Details | | | | | | | | |
| Check operation of machine – run one cycle | | | | | | | | |
| Check door for water leaks | | | | | | | | |
| Check door for steam leaks | | | | | | | | |
| Check disinfection temperature on digital is 85° | | | | | | | | |
| | | | | | | | | |
| After cycle has finished, open door and - | | | | | | | | |
| Check condition of seal | | | | | | | | |
| Check condition of carrier | | | | | | | | |
| Check rotating jet(s) are free to spin | | | | | | | | |
| Check jet(s) are not blocked | | | | | | | | |
| Check cleanliness of chamber | | | | | | | | |
| | | | | | | | | |
| If dosing system is fitted - | | | | | | | | |
| Check the liquid level – top up if required | | | | | | | | |
| Check operation of dosing pump | | | | | | | | |
| | | | | | | | | |
| Check overall condition of machine | | | | | | | | |
| Check all panels are clean | | | | | | | | |
| Check no screws are missing from panels | | | | | | | | |
| Check foot switch works and is clean | | | | | | | | |
| Check condition of utensils – replace if required | | | | | | | | |

Please Photocopy This Page and Carry Out Weekly Checks